




BLEED VALVE KIT# HA5404

Capilano Hydraulic Steering

General

The installation of a ball valve (as shown) will aid in the removal of trapped air quickly and efficiently in a multiple station system or where a gradual rise in the compensating line cannot be achieved.

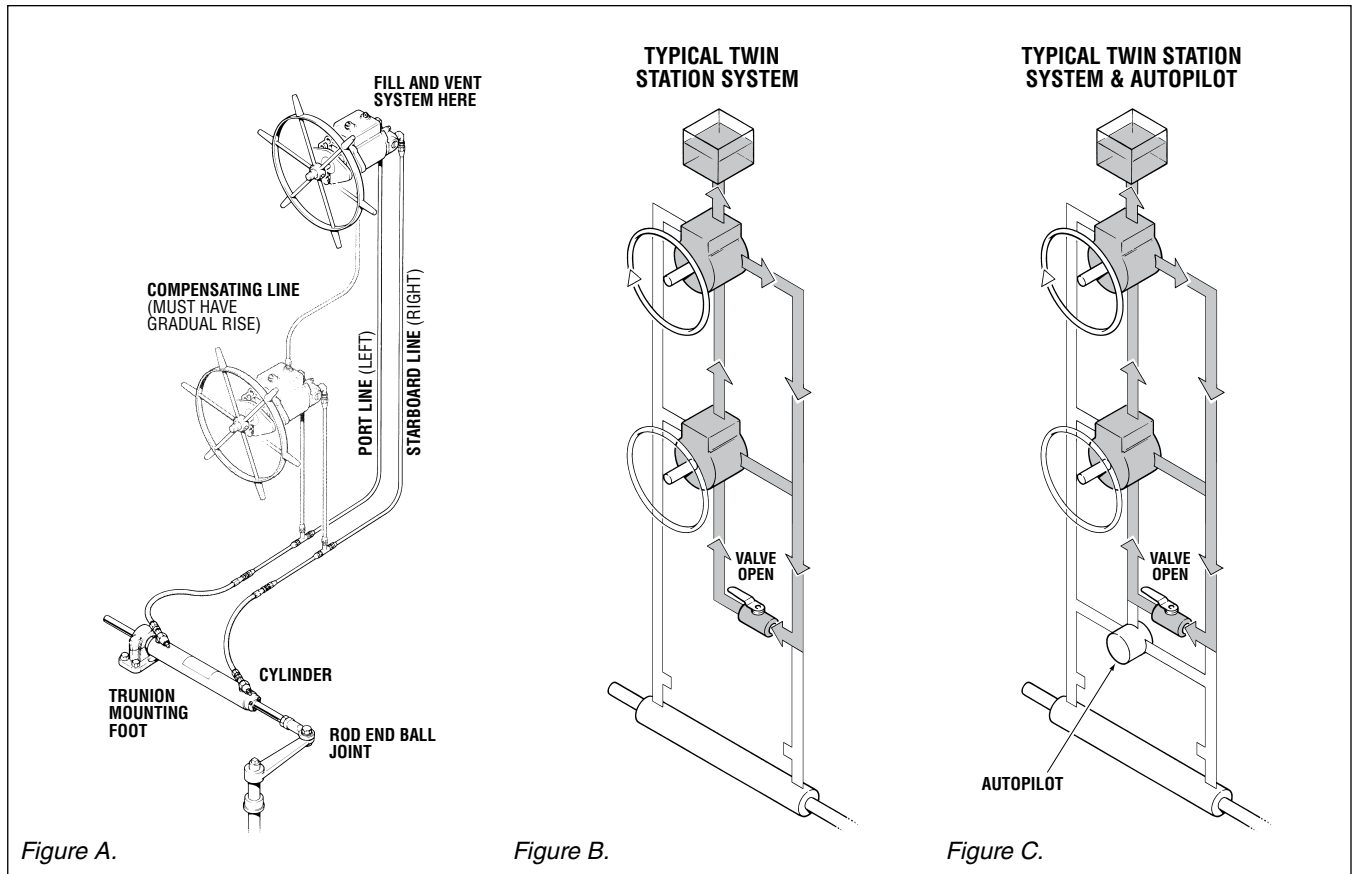

Installation

⚠ WARNING

For normal steering bleed valve must be in the "CLOSED" position. Failure to comply with this instruction may result in loss of steering, causing property damage and/or personal injury.

This kit contains a ball valve only. Due to many systems variables, additional fittings and/or hose/tube maybe required for the installation of this valve.

- Purge the steering system as per instructions supplied with steering system, with the ball valve in the closed position.
- Open ball valve.
- Turn the upper station steering wheel **CLOCKWISE** for approximately one to two minutes. Turn the steering wheel at approximately 50 turns per minute. **DO NOT turn too slowly.**
- Close ball valve.
- Remove ball valve handle. This is a safety precaution to prevent accidental opening during steering system use.