



POWER ASSIST MAXI FUSE/FUSE HOLDER

Installation Steps

⚠ WARNING

Failure to adhere to Steps 2 and 7 may result in an explosion and/or fire resulting in property damage or personal injury or death.

- 1 Ensure Power Assist pump is turned "OFF".
- 2 Ensure area is vented and free of any fumes.
- 3 Disconnect the Negative (-) connection from the battery.
- 4 Disconnect the Positive (+) connection from the battery.
- 5 Using wire cutters, cut the existing fuse and fuse holder off the Power Assist pump lead.
- 6 Using standard electrical connectors, connect the new fuse harness (Figure A) to the Positive (+) connection lead from the Power Assist pump. The fuse harness leads are 6 gauge wire.
- 7 Repeat Step 2 before performing Step 8.
- 8 Connect the negative (-) lead to the negative (-) terminal on the battery.
- 9 Connect the Positive (+) lead to the positive (+) terminal on the battery.
- 10 Turn the Power Assist "ON".
- 11 Make several wheel turns from hard over to hard over to confirm that the power assist is working.

NOTICE

After connection is made and prior to connecting to the battery, Teleflex recommends that the two connection points are protected with heat shrink.

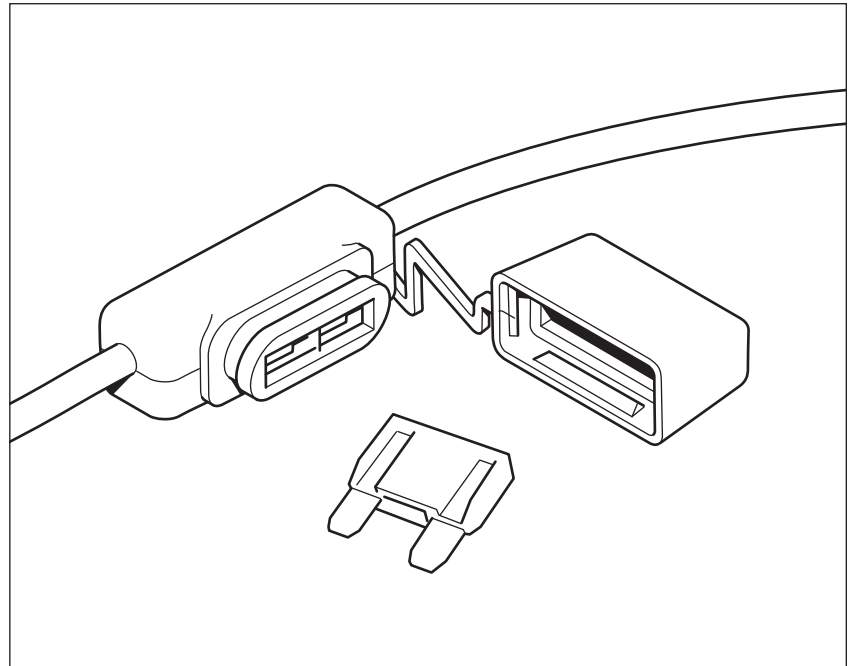


Figure A